SOHO HOME









Available in 4 sizes

 $20 \times 30 \text{cm (Swatch)} \quad (\text{H20} \times \text{W30} \times \text{D1cm} / \text{H8"} \times \text{W1'0"} \times \text{D0.4"}) \\ 170 \times 240 \text{cm} \quad (\text{H170} \times \text{W240} \times \text{D1cm} / \text{H5'7"} \times \text{W7'10"} \times \text{D0.4"}) \\ 200 \times 300 \text{cm} \quad (\text{H200} \times \text{W300} \times \text{D1cm} / \text{H6'7"} \times \text{W9'10"} \times \text{D0.4"}) \\ 270 \times 360 \text{cm} \quad (\text{H270} \times \text{W360} \times \text{D1cm} / \text{H8'10"} \times \text{W11'10"} \times \text{D0.4"}) \\ \end{cases}$

Poyser Rug, 20 x 30cm Swatch

£10 Regular price £9 Member price

Hand-tufted wool creates a geometric pattern designed to match back to our made-to-order palette.

The pattern that decorates our Poyser rug is designed to mirror the bedrooms of Soho House Rome, which are filled with soft furnishings in geometric patterns. Reflective viscose fibres create a subtle sheen around the border of this versatile design.

Dimensions

Dimensions: H20 x W30 x D1cm / H8" x W1'0" x D0.4"

Weight: 0.29kg / 0.6lbs

Packaged weight: 1kg / 2.2lbs

Details

Assembled size: 20 x 30cm **Assembly required**: No

Composition: Pile: 79% Wool, 21% Viscose, Base: 55% Cotton, 37% Polyester, 8% Viscose , Overall: 75% Wool, 21% Viscose, 2% Cotton, 2%

Polyester

Care instructions: Vacuum regularly on a low setting. Do not use heavy duty vacuums. Blot spills Immediately with a soft, dry cloth, spot clean with mild soap if needed; occasional professional cleaning may be required. Do not dry clean. If loose end appears, do not pull; Instead clip with scissors and tie a knot at the loose ends. Avoid direct exposure to sunlight. Rotate rug occasionally to equalize wear, if the rug gets wet, place it on a flat surface to dry. Store your rug by rolling, and wrap with cloth for protection. Rug pad recommended. with a soft, dry cloth, spot clean with mild soap if needed; occasional professional cleaning may be required. Do not dry clean. If loose end appears, do not pull; Instead clip with scissors and tie a knot at the loose ends. Avoid direct exposure to sunlight. Rotate rug occasionally to equalize wear, if the rug gets wet, place it on a flat surface to dry. Store your rug by rolling, and wrap with cloth for protection. Rug pad recommended.